



Ground points a = Located under right front pillar b = Located under left front pillar d = Located on left front fender apron near junction block No. 3 f = Located in back panel near door key cylinder