



Taillights and Illumination



Headlights



Interior Lights




U Unlock and
S Seat Belt Warning



Trip Computer



Remote Control Mirrors with Heater

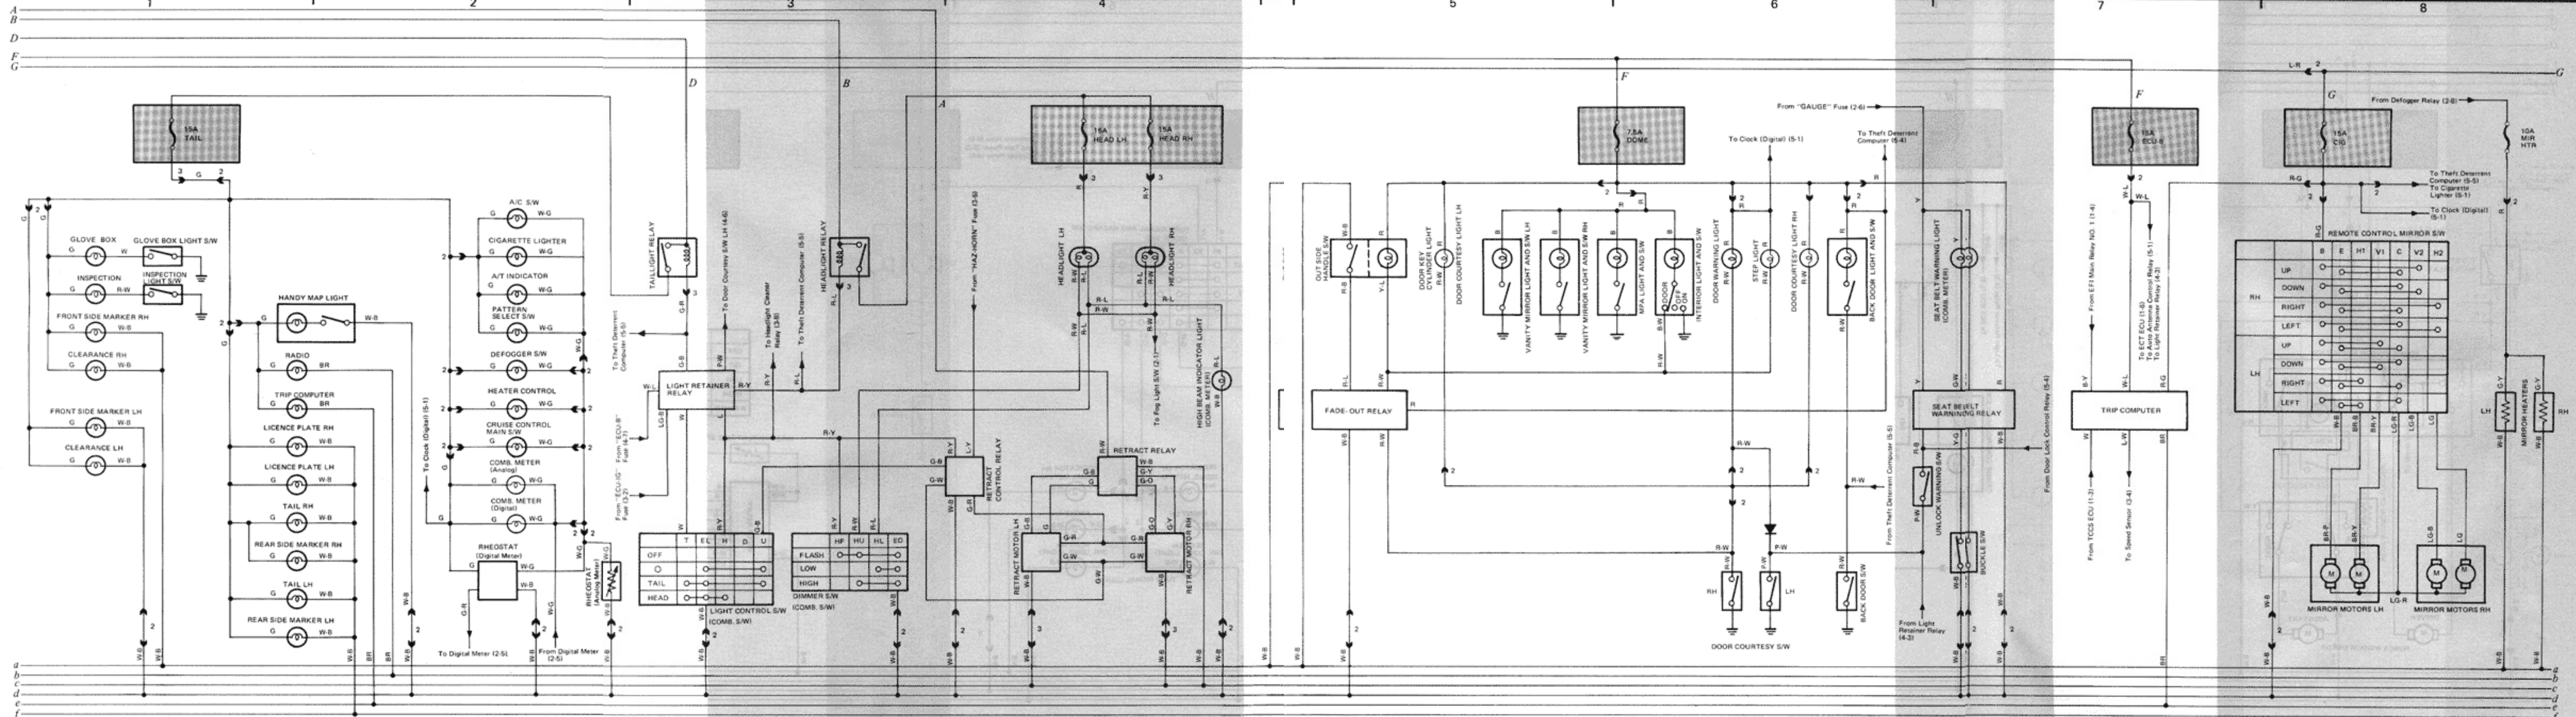

Ground points a = Located under right front pillar b = Located under left front pillar c = Located in left front fender near battery d = Located on left front fender apron near junction block No. 3 e = Located on right side of air intake chamber f = Located in back panel near door key cylinder