



Ground point

a - Located under right front pillar

b - Located under left front pillar

c - Located in left front fender near battery

d - Located on left front fender apron near junction block No. 3

e - Located on right side of air intake chamber

f - Located in back panel near door key cylinder