


SPORT ROOF COMPONENTS

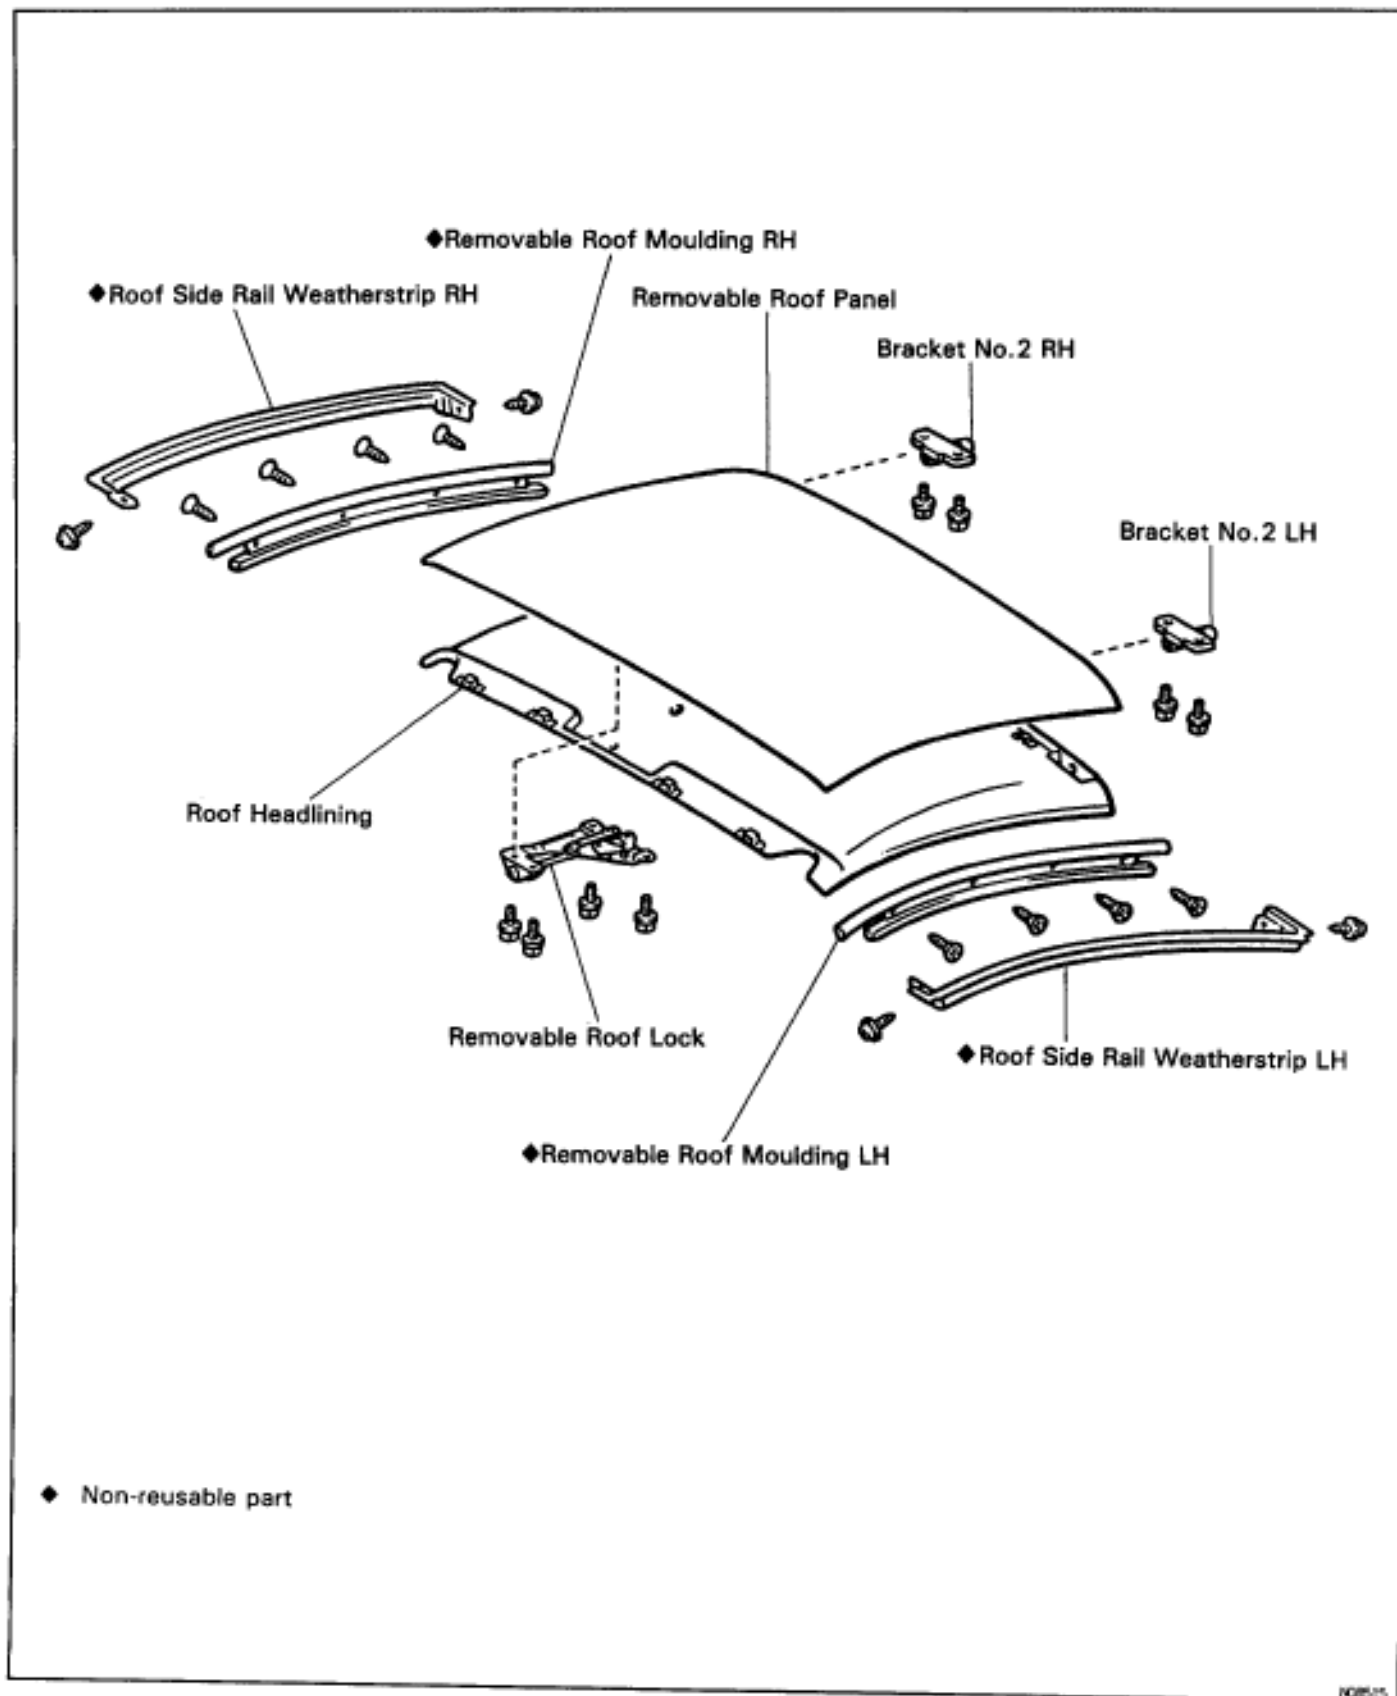

ON-VEHICLE INSPECTION

INSPECT REMOVABLE ROOF PANEL ALIGNMENT

- (a) With the removable roof installed, check for water leakage.
- (b) Check for a difference in clearance and level between the removable roof panel and roof panel.

Clearance:

Front side: 6.0 ± 1.5 mm (0.236 \pm 0.06 in.)


Rear side: 6.0 ± 1.5 mm (0.236 \pm 0.06 in.)

Level: (Rear side)

RH/LH side: +1.5 --2.0 mm (+0.06 --0.08 in.)

Center: +1.0 --2.0 mm (+0.04 --0.08 in.)


Zero level: upper surface of roof panel

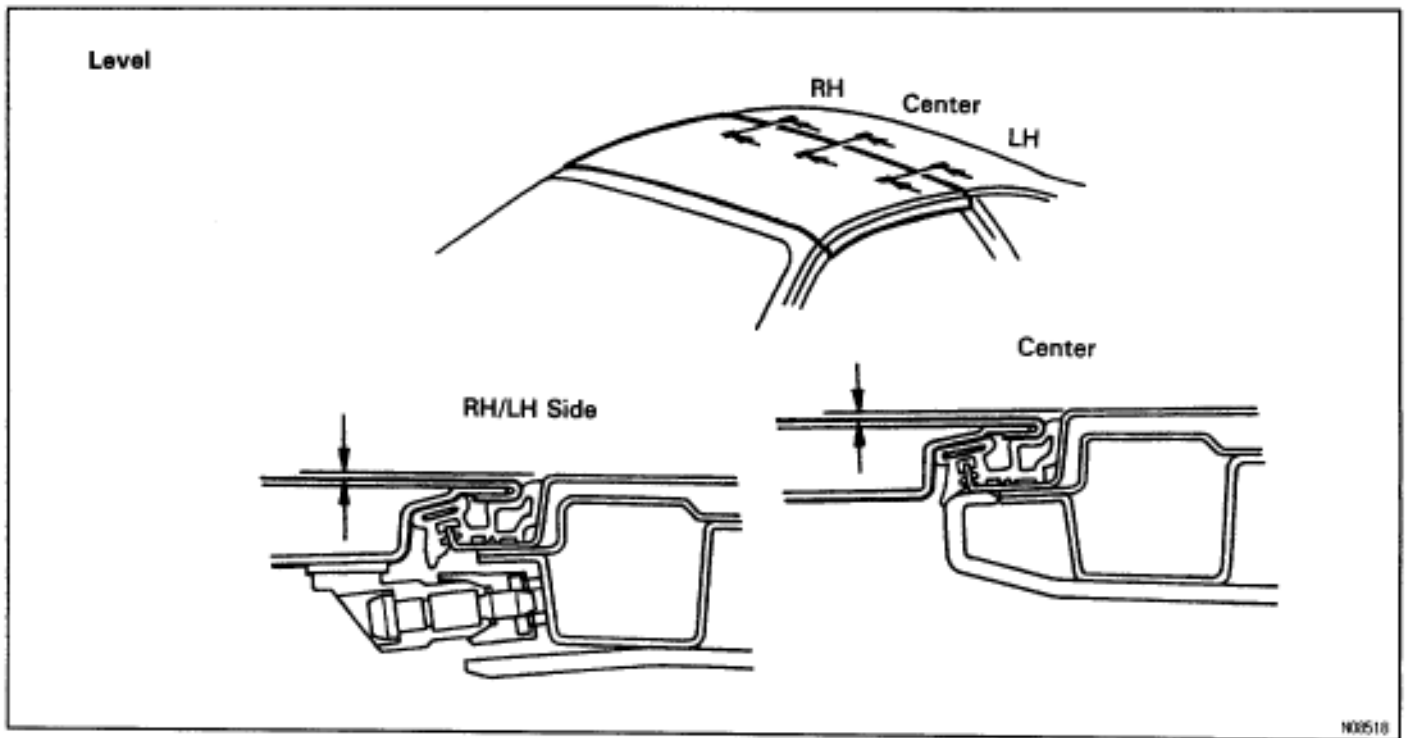

REMOVABLE ROOF ADJUSTMENT

1. REMOVE ROOF HEADLINING


- (a) Removable roof headlining – for clearance adjustment (See pages [BO-41](#) and 61)
- (b) Rear roof headlining – for level adjustment (See pages [BO-58](#) to 61)

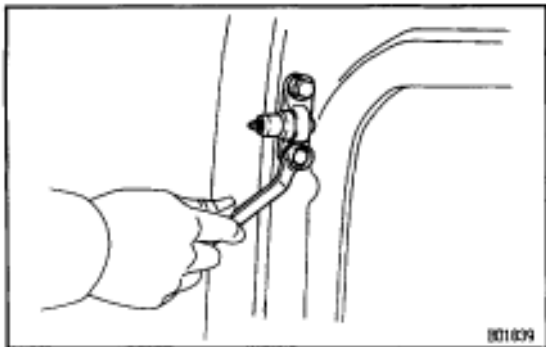

2. ADJUST CLEARANCE

Adjust the removable roof bracket by loosening the removable roof bracket bolts.

If the clearance is not within specification, repair the body panel.

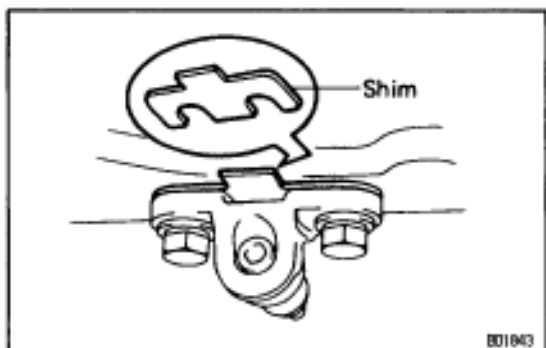

3. ADJUST LEVEL

Select the shim that makes the difference between the rear side of removable roof panel and rear roof panel a minimum.

Shim thickness:

1.0 mm (0.039 in.)

2.0 mm (0.079 in.)

4. INSTALL ROOF HEADLINING

Installation is in the reverse order to removal.

REMOVABLE ROOF DISASSEMBLY AND ASSEMBLY

1. DISASSEMBLE THESE PARTS:

- (a) Roof side rail weatherstrip
- (b) Removable roof moulding
- (c) Roof headlining
- (d) Removable roof lock
- (e) Bracket No.2

2. ASSEMBLE THESE PARTS:



- (a) Bracket No.2
- (b) Removable roof lock
- (c) Roof headlining
- (d) Removable roof moulding

3. APPLY SEAL PACKING

Apply seal packing on the removable roof moulding as shown in the illustration.

L: 4 mm (0.16 in.)

Part No. 08826-00080

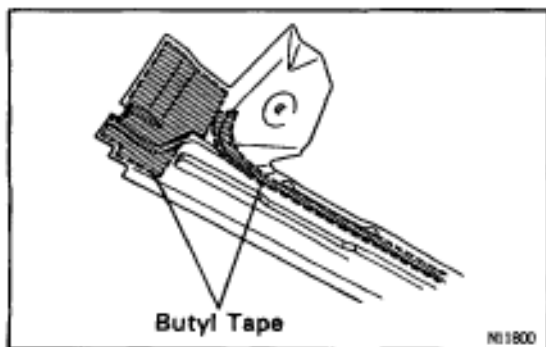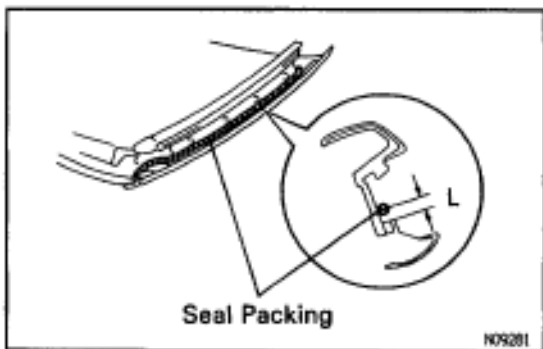

4. INSTALL ROOF SIDE RAIL WEATHERSTRIP